

Micro-SPA


• CE & AS •



The **Quick Reference Card** provides a summary of Micro-Spa's main functions and a quick overview of the operations accessible from your topside keypad.

Starting the pump:

Press **Pump** key to turn pump on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump). Pressing a third time turns pump off. When pump is started, it will automatically run for 20 minutes, unless it has been manually deactivated.

-  The "Pump" indicator lights up when pump is on at high speed. It flashes when pump is on at low speed.


Turning the light on:

Press **Light** key to turn light on at high intensity. Subsequent presses will change light intensity until it is turned off. A built-in timer turns light off after 2 hours, unless manually deactivated first.

-  The "Light" indicator is displayed when light is on at high intensity. It flashes when light is on at low intensity.

Setting water temperature:


Press and hold **Up** or **Down** arrow key to set the current water temperature setting. The selected temperature ("Set Point" value) will be displayed for 5 seconds.

-  The "Set Point" indicator displays the desired temperature, NOT the current water temperature!

Water temperature can be adjusted in 0.5°C (1°F) from 15 to 40°C (59 to 104°F).

Automatic water heater start:

When water temperature falls 0.5°C (1°F) lower than Set Point, the heater automatically comes on until the temperature reaches Set Point plus 0.5°C (1°F).

-  The "Heater" indicator lights up when heater is on.

Note: If your system is configured in High Current (HC) mode, the heater will not start if pump is running at high speed.

Filter cycles:

The system automatically performs one filter cycle every 24 hours. During a filter cycle, the pump will run for a programmed number of hours.

To set filter cycles:

- Press and hold **Light** key for 5 seconds.
- The display will show "Fxx", with "xx" representing the currently set filter cycle duration in hours.
- Press **Up** or **Down** arrow key to change setting from 0 to 24 hours.
- When the desired setting is displayed, press **Light** key again. The display will show "dxx", with "xx" representing the delay before cycle starts.
- Press **Up** or **Down** arrow key to change setting from 0 to 23 hours.
- When the desired setting is displayed, press **Light** key to confirm.

French, German and Spanish versions available upon request.


Micro-SPA

¥CE & AS / Pump¥& Blower System

The Quick Reference Card provides a summary of Micro-Spa's main functions and a quick overview of the operations accessible from your topside keypad.


Starting the pump:

Press **Pump** key to turn pump on at low speed. Press a second time to turn pump to high speed (with a dual-speed pump). Pressing a third time turns pump off. When pump is started, it will automatically run for 20 minutes, unless it has been manually deactivated.

 The "Pump" indicator lights up when pump is on at high speed. It flashes when pump is on at low speed.


Starting the blower:

Press **Blower** key to turn blower on. Pressing a second time turns blower off. A built-in timer automatically turns blower off after 20 minutes, unless manually deactivated first.

 The "Blower" indicator is displayed when blower is on.


Turning the light on:

Press **Light** key to turn light on at high intensity. Subsequent presses will change light intensity until it is turned off. A built-in timer turns light off after 2 hours, unless manually deactivated first.

 The "Light" indicator is displayed when light is on at high intensity. It flashes when light is on at low intensity.


Setting water temperature:

Up/Down arrow key is used to set water temperature.

 Press and hold Up/Down key to increase Set Point. To decrease, press and hold Up/Down key again. Set Point will be displayed during programming sequence.

Automatic water heater start:

When water temperature falls 0.5 $^{\circ}$ F (1 $^{\circ}$ F) lower than Set Point, the heater automatically comes on until the temperature reaches Set Point plus 0.5 $^{\circ}$ C (1 $^{\circ}$ F).

 The "Heater" indicator lights up when heater is on.

Note: If your system is configured in High Current (HC) mode, the heater will not start if pump is running at high speed. If your system is configured in Low Current (LC) mode, the heater will not start if blower is on.

Filter cycles:

The system automatically performs one filter cycle every 24 hours. During a filter cycle, the pump will run for a programmed number of hours.

To set filter cycles:

- ¥ Press and hold Light key for 5 seconds.
- ¥ The display will show "Fxx", with "xx" representing the currently set filter cycle duration in hours.
- ¥ Press Up/Down arrow key to change setting from 0 to 24 hours.
- ¥ When the desired setting is displayed, press Light key again. The display will show "dxx", with "xx" representing the delay before cycle starts.
- ¥ Press Up/Down arrow key to change setting from 0 to 23 hours.
- ¥ When the desired setting is displayed, press Light key to confirm.

French, German and Spanish versions available upon request.